



SMS Remote Management

The router supports the defined SMS to control 4G/3G connection, disconnection and system reboot.


1. SMS Format

Edit message in mobile phone or GSM modem as the defined format as below.

Action	4G/3G Disconnect	4G/3G Connect	Router Reboot
SMS Format(SMS code*action)	SMS code*down	SMS code*up	SMS code*reboot

2. Configure SMS code

Configure SMS code in the router. Router just identify the correct SMS code which is configured in Cellular GUI.

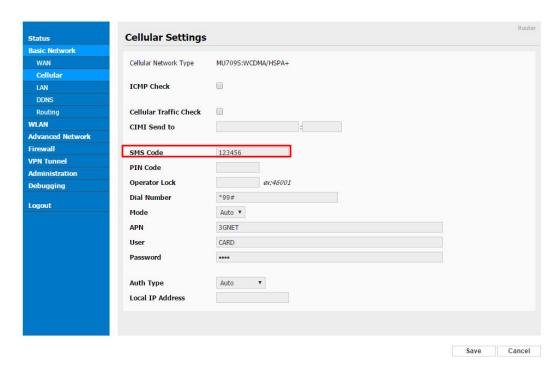

SMS code 123456 as example, the message content as below.

- 1) Disconnection
- 123456*down
- 2) Connection
- 123456*up
- 3) Reboot
- 123456*reboot