



**WLINK**

# User Manual

---Apply to WL-R200 Series Industrial 3G/4G Router

V3.1

<http://www.wlink-tech.com>

April, 2016



**Copyright © Shenzhen WLINK Technology Company Limited 2012 ~ 2016**

Without our written approval, Anyone can't extract, copy whole or part of content of this file and can't spread out in any format.

### **Caution**

Due to product updates or functional upgrading, we may renew the content of this file, and this file only for reference. All statement, information, suggestion.etc in this file does not compose any form of guarantee and we WLINK reserves the right of final explanation.

## **Shenzhen WLINK Technology Company Limited**

Add: 3F, Yiben Building, Chaguang Road, Xili, Nanshan District, China, 518000

Web: <http://www.wlink-tech.com>

Service Email: [support@wlink-tech.com](mailto:support@wlink-tech.com)

Tel: 86-755-86089513

Fax: 86-755-26059261

# Contents

1 Product Introduction.....	4
1.1 Product overview.....	4
1.2 Model introduction.....	4
1.3 Product Appearance.....	6
1.4 Typical Application Diagram.....	6
1.5 Features.....	7
2 Hardware Installation.....	8
2.1 Panel:.....	8
2.2 LED Status.....	9
2.3 Dimension.....	10
2.4 How to Install.....	10
3 Router Configuration.....	12
3.1 Local Configure.....	12
3.2 Basic Configuration.....	13
3.3 WLAN Setting.....	19
3.4 Advanced Network Setting.....	23
3.5 VPN Tunnel.....	29
3.6 System Management.....	35
3.7 Debugging Setting.....	43

3.8 “RST” Button for Restore Factory Setting.....	46
3.9 Appendix (For advanced optional features only).....	46

# 1

## Product Introduction

### 1.1 Product overview

WLINK industrial Router is based on industrial grade design, built-in high-powered 32bit MIPS processor, and multi-band 4G/3G communication module, support WCDMA, HSPA+, 4G FDD/TDD etc., provide quick and convenient internet access or private network transmission to customer, provide wire-line network or wireless WLAN share high speed access, meanwhile, customized high security VPN (Open VPN、IPSec、SSL), to construct safe channel, widely used in financial, electric power, environment, oil, transportation, security, etc..

WLINK industrial series router provide GUI, optional CLI configuration interface, customer can configure by IE explore or Telnet/SSH, various configuration method, concise and friendly interface make configuring and managing of all router terminal easier ,meanwhile, WLINK provide M2M terminal management platform to manage all router terminal with remote management. User can monitor all terminals which connected to platform successfully by this platform, provide long-distance control, parameter configuration, and long-distance upgrade service.

### 1.2 Model introduction


WLINK industrial grade router series have single module / single SIM card, single module / double SIM card, double module / double SIM card design, support multi-band frequency WCDMA, HSPA+, 4G FDD/TDD etc., and downward compatibility to GPRS、EDGE、CDMA 1x, etc., optional GPS module Expansion positioning function, to suit different requirement and different network environment of different operators. Our Router series have many model for option, below is the product model indications in detail, for more optional models, please consult local distributors /resellers.

Table 1-1 Router partial model table

Optional Model List							
Model	LTE 4G	3G	Interface	WiFi	GPS	DL	UL
WL-R200L	FDD LTE 2600/2100/1800/900/800MHz	UMTS 800/850/900/1900/2100MHz	1xLAN 1xWAN			100M	50M
WL-R200L-w	FDD LTE 2600/2100/1800/900/800MHz	UMTS 800/850/900/1900/2100MHz	1xLAN 1xWAN	✓		100M	50M
WL-R200L-g	FDD LTE 2600/2100/1800/900/800MHz	UMTS 800/850/900/1900/2100MHz	1xLAN 1xWAN		✓	100M	50M
WL-R200LZ	FDD LTE: 2600/2100/1900/1700/900//850/700MHz TDD LTE: B38	UMTS 2100/1900/850/900MHz	1xLAN 1xWAN			FDD:100M TDD:60M	FDD:50M TDD:60M
WL-R200LZ-w	FDD LTE: 2600/2100/1900/1700/900//850/700MHz TDD LTE: B38	UMTS 2100/1900/850/900MHz	1xLAN 1xWAN	✓		FDD:100M TDD:60M	FDD:50M TDD:60M
WL-R200LZ-g	FDD LTE: 2600/2100/1900/1700/900//850/700MHz TDD LTE: B38	UMTS 2100/1900/850/900MHz	1xLAN 1xWAN		✓	FDD:100M TDD:60M	FDD:50M TDD:60M
WL-R200H		HSPA+ 2100/1900/850MHz	1xLAN 1xWAN			21M	5.76M
WL-R200H-w		HSPA+ 2100/1900/850MHz	1xLAN 1xWAN	✓		21M	5.76M
WL-R200H-g		HSPA+ 2100/1900/850MHz	1xLAN 1xWAN		✓	21M	5.76M
WL-R200H2		HSPA 2100/1900/900/850MHz	1xLAN 1xWAN			14M	5.76M
WL-R200H2-w		HSPA 2100/1900/900/850MHz	1xLAN 1xWAN	✓		14M	5.76M
WL-R200H2-g		HSPA 2100/1900/900/850MHz	1xLAN 1xWAN		✓	14M	5.76M
WL-R200U		HSUPA 2100/1900/900/850MHz	1xLAN 1xWAN			7.2M	5.76M
WL-R200U-w		HSUPA 2100/1900/900/850MHz	1xLAN 1xWAN	✓		7.2M	5.76M
WL-R200U-g		HSUPA 2100/1900/900/850MHz	1xLAN 1xWAN		✓	7.2M	5.76M
WL-R200E		EVDO 800/MHz	1xLAN 1xWAN			3.1M	1.8M
WL-R200E-w		EVDO 800MHz	1xLAN 1xWAN	✓		3.1M	1.8M
WL-R200E-g		EVDO 800MHz	1xLAN 1xWAN		✓	3.1M	1.8M
<b>Note:</b> 1. If need Special frequency band, pls consult wlink sale person 2. Please specify before order if need VPN or OpenVPN							

## 1.3 Product Appearance

Table 1-2 WLINK Router Appearance

Series	R200	R200—W(G)	R520-g	R520-d
Appearance				
Ports	1*LAN 1*WAN	1*LAN + 1*WAN + GPS or WLAN(11n 1T1R)	1*WAN + 4*LAN + GPS or WLAN(11n 1T1R)	1*WAN + 4*LAN + single module/dual SIM, dual module/dual SIM
Product category	Single port router	Single port Wi-Fi (GPS) router	Multi-port Wi-Fi router	multi-port double-link router

## 1.4 Typical Application Diagram

WLINK 4G/3G Router widely used in Telecom, economic, advertisement, traffic, environment protection business area.

For example, in economic area, R200 Series Router connect server by IPSec & GRE to ensure data security, tiny design makes it could installed into ATM machine. All these technology ensured safe and reliable data transmission, and minimize the probability of network disconnection, and maximize the usability of economic business like ATM, POS .etc.

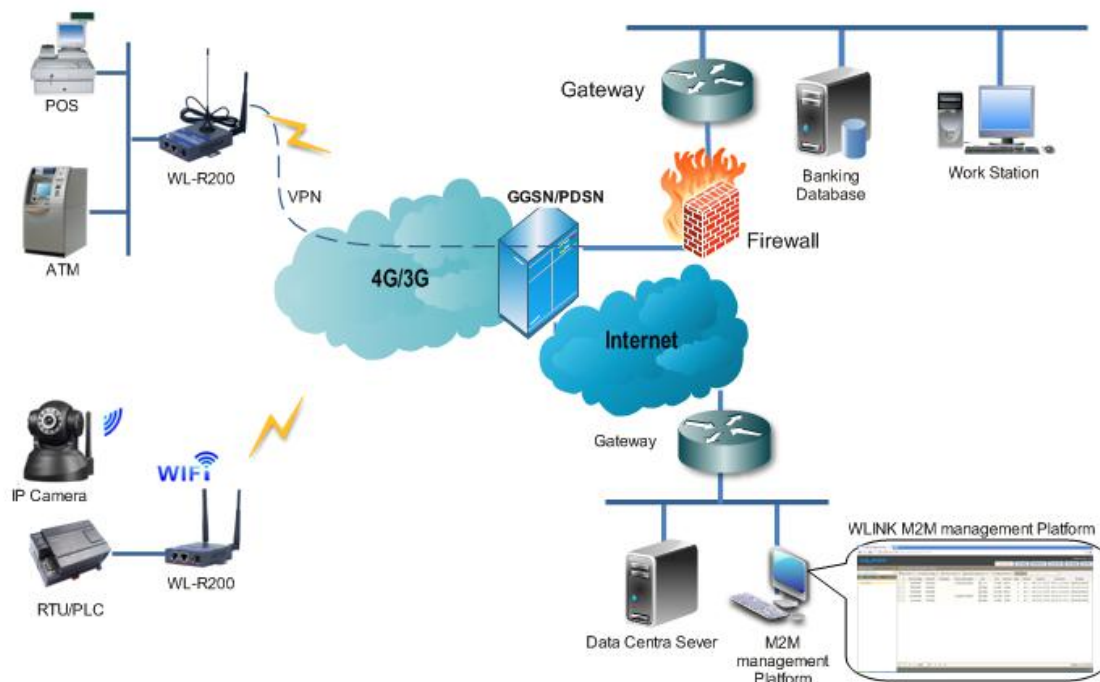


Figure 1-1 Network Topology

WLINK industrial router is based on mobile wireless public network or private network, build wireless data channel in mature network, to lower down the cost of wireless data transmission and technique.

## 1.5 Features

- Various cellular module optional, LTE/HSPA+/EVDO/CDMA2000 optional
- Support IEEE802.11b/g/n Wi-Fi AP function, extended support to Wi-Fi terminal, WDS bridging, support WEP, WPA/WPA2 Personal/Enterprise, TKIP/AES, etc., Authenticated encryption mode
- Support virtual data and private network (APN/VPDN)
- Optional support RS-232/RS-485 interface data transparent transmission and protocol conversion
- Support on-demand dialing, include timing on/off-line, voice or SMS control on/off-line, data trigger online or link idle offline
- Support TCP/IP protocol stack, support Telnet, HTTP, SNMP, PPP, PPPoE, etc., network protocol
- Support VPN Client (PPTP, L2TP), optional support Open VPN, IPSec, HTTPs, SSH, etc. advanced VPN function
- Provide friendly user interface, use normal web internet explorer to easily configure and manage, long-distance configure Telnet/SSH + CLI
- Optional IPv6 protocol stack
- Optional support M2M terminal management platform
- WDT watchdog design, keep system stable
- Customization as customer's demand





# 2 Hardware Installation

This chapter is mainly for installation introduction, there would be some difference between the scheme and real object. But the difference doesn't have any influence to products performance.

## 2.1 Panel:

Table 1-1 WLR200 -Structure

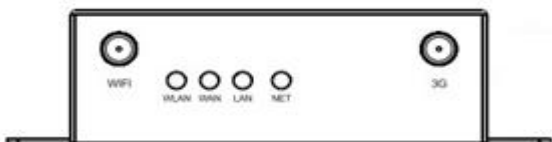WLINK Tech.	R200 series
Front	
Rear	



### NOTE

There are some different for Antenna interface and indicator light for the expanded Wi-Fi, GPS series.

Table 2-1 Router Interface

Port	Instruction	Remark
USIM	Plug type SIM Slot, support 1.8/3V/5V automatic detection	
3G	3G antenna, SMA connector, 50Ω	
WIFI	Wi-Fi antenna, SMA connector, 50Ω	Optional

Port	Instruction	Remark
LAN	10/100Base-TX, MDI/MDIX self-adaption,	R200: 1*LAN
WAN	10/100Base-TX, MDI/MDIX self-adaption	R200 serial port and WAN port multiplex
RST	Reset button,(press on button 5 seconds)	
PWR	Power connector	5 ~ 26V DC
WAN/CON	Four pin serial port, suitable for collection device with RS-232 or RS-485 interface, for wireless data transmission, CON for debug test.	R20 serial port and WAN port multiplex

## 2.2 LED Status

Table 2-2 Router LED indicator Status

silk-screen	color	status	Indication
NET	Green	Blink	Strong Signal
	Orange	Blink	Normal Signal
	Red	Blink	Weak Signal
		Blinking slowly(2s)	Already login network or dialing online. LED color is matched with signal indication. For example, for strong signal, after login network or online, it will blink green light.
		Blinking quickly(0.5s)	Dialing
WLAN	Green	Solid light	WLAN port open, but no data sending.
	Green	Blinking quickly	Data is in transmitting
	Green	Dark	WLAN port isn't opened
LAN	Green	Solid light	connect ok
	Green	Blinking	Data Sending
	Green	Dark	Not connected



### NOTE

There are some difference among the LED indicator of expanded Wi-Fi, GPS function and single module/double SIM, double module/double SIM series products.

## 2.3 Dimension

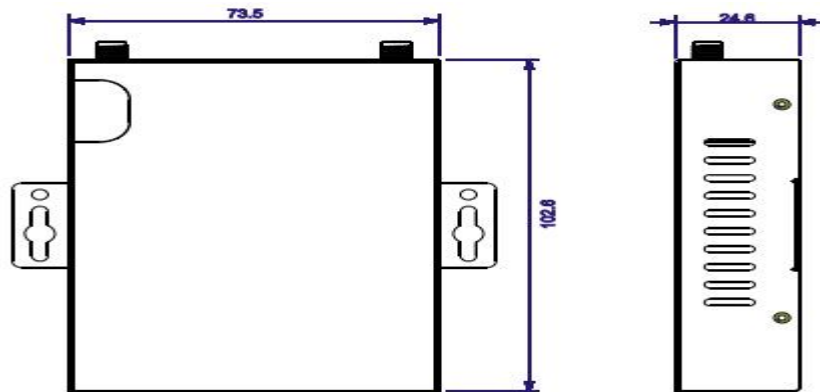


Figure 2-2 WL-R200 Series Router Dimension Figure

## 2.4 How to Install

### 2.4.1 SIM/UIM card install

If use dual SIM/UIM card router, you may need insert dual SIM before configure it. After installation, please follow below steps to connect the router.



Before connecting, please disconnect any power resource of router

### 2.4.2 Ethernet Cable Connection

Use the Ethernet cable to connect the cellular Router to computer directly, or transit by a switch.

### 2.4.3 Serial Port Connection

If you want to connect the router via serial port to laptop or other devices, you should prepare a serial port or RJ45 cable, this cable is optional. One end connect to computer serial port, the other end connects the console port of the router



Before connecting, please disconnect any power resource of router

### 2.4.4 Power Supply

In order to get high reliability, WLINK Series Router adapt supports wide voltage input range: +5V~+36VDC, support hot plug and complex application environment.

## 2.4.5 Review

After insert the SIM/UIM card, connect Ethernet cable and necessary antenna, connect power cable.



Please connect the antenna before connect the power cable, otherwise the signal maybe poor because of impedance mismatching.

---

Notice:

- Step 1 Check antenna connection.
- Step 2 Check SIM/UIM card, confirm SIM/UIM card is available.
- Step 3 Power on the industrial Router

----END

# 3 Router Configuration

This Chapter introduces the parameter configuration of the router, the router can be configured via web internet explorer, Firefox, or chrome. Here we take GUIs 7 system and Internet Explorer 9.0 as sample.

## 3.1 Local Configure

The router supports to be configured by local Ethernet port, you could specify a static IP or DHCP get IP for your computer. The default IP address is 192.168.1.1, subnet mask is 255.255.255.0, please refer to followings:

- Step 1 Click “start > control panel”, find “Network Connections” icon and double click it to enter, select “Local Area Connection” corresponding to the network card on this page. Refer to the figure below.



Figure 3-3 Network Connection

- Step 2 Obtain a IP address automatically or set up IP address, 192.168.1.xxx (XXX can be any number between 2~254)

- Step 3 Run an Internet Explorer and visit “<http://192.168.1.1/>”, to enter identify page.

User should use the default user name and password when log in for the first time



Figure 3-4 User Identify Interface

----END

## 3.2 Basic Configuration



NOTE

Different software version have different web configuration interface, below take R200 2.6.0.1 version as example.

After visit the WEB interface, you can check the current status of Router, or modify router configuration via web interface, below is the introduction for the common setting.

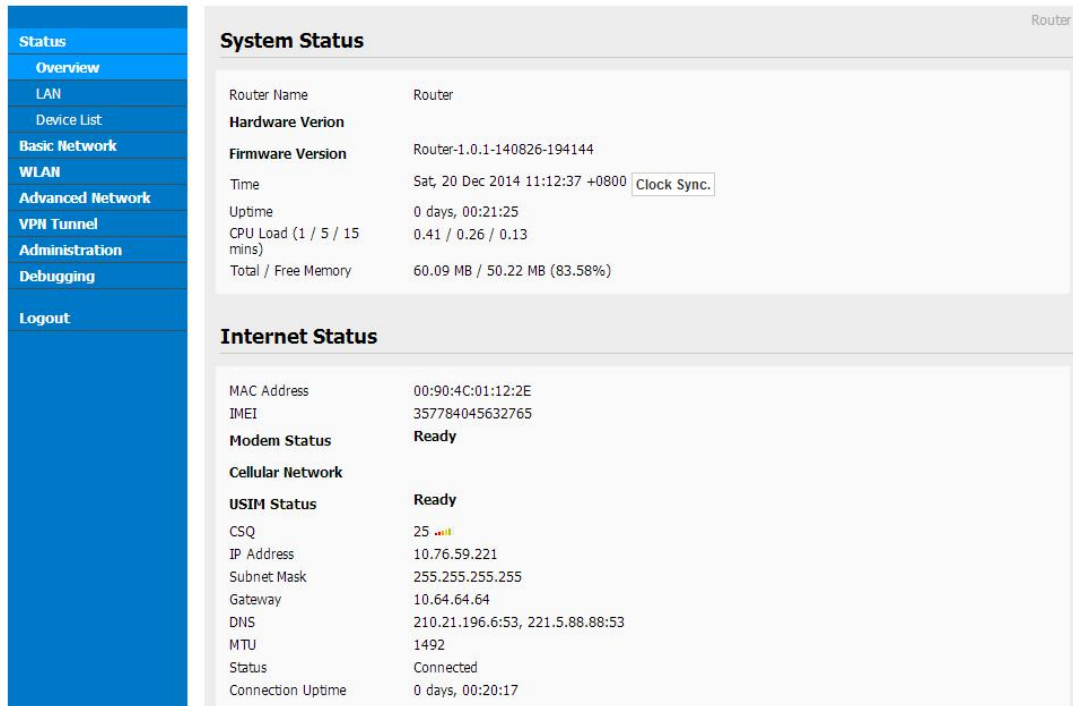


Figure 3-5 Router Status GUI

### 3.2.1 WAN Configure

Step 1 Single Click Basic Network-> WAN, you can modify relevant parameter according to the application.

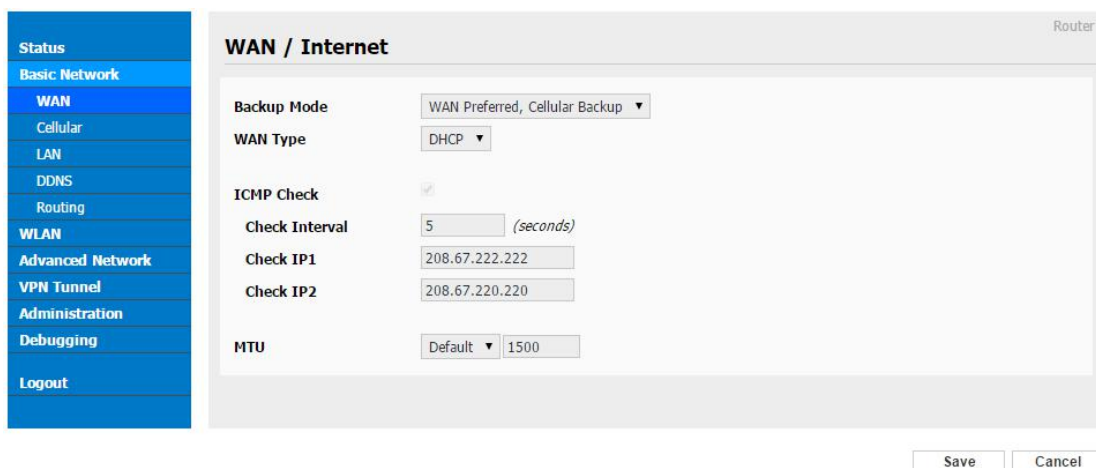


Figure 3-1 WAN Settings GUI

Table 3-1 Cellular Setting Parameter Instruction

Parameter	Instruction
Backup mode	4 options for WAN

Parameter	Instruction
	<ul style="list-style-type: none"> <li>● WAN Preferred, Cellular backup</li> <li>● Cellular Preferred, WAN backup</li> <li>● WAN Only</li> <li>● Cellular Only</li> </ul>
WAN Type	<ul style="list-style-type: none"> <li>● DHCP</li> <li>● Static</li> </ul>
ICMP Check	<ul style="list-style-type: none"> <li>● Check interval. Default time is 5seconds.</li> <li>● Check IP1</li> <li>● Check IP2</li> </ul>
MTU	Maximum Transmission Unit is 1500bytes as default. It supports other value as requested.



#### 【ICMP Check】

The defined IP is reachable, router automatically implement ICMP check as default interval 5seconds.

If IP1 is unreachable, ICMP check interval will be 1 second, timeout is 4seconds and retry 2times, then check IP2. If IP2 is reachable, it will check IP2 as defined interval. If IP2 is also unreachable, router will implement Check IP1 rule as 1 second interval, 4seconds timeout and retry 2times.

## 3.2.2 Cellular Network Configure

Step 1 Single Click Basic Network-> Cellular, you can modify relevant parameter according to the application.

Status

Basic Network

WAN

Cellular

LAN

DDNS

Routing

WLAN

Advanced Network

VPN Tunnel

Administration

Debugging

Logout

Router

Cellular Settings

Cellular Network Type

MU609:WCDMA/HSUPA

ICMP Check

☐

Custom Options

Connect Mode

Keep Alive(Auto-Online) ▾

MTU

Default ▾ 1492

PIN Code

Dial Number

\*99#

APN

3GNET

User

card

Password

\*\*\*\*

Save

Cancel



Figure 3-2 Cellular Settings GUI

Table 3-2 Cellular Setting Parameter Instruction

Parameter	Instruction
Enable	Enable SIM card dial
ICMP check	To enable or disable ICMP check rules. Enable the ICMP check and setup a reachable IP address as destination IP. Once ICMP check failed, router will switch SIM card.
Custom Options	
Connect Mode	<ul style="list-style-type: none"> <li>● Keep alive (Auto-online).The router will automatically connect 3G/4G network and keep online.</li> <li>● Connect On Demand. Idle offline if no data from LAN to 3G/4G within defined time.</li> <li>● Schedule, Define online and offline time. This function need to enable NTP function,</li> <li>● Call/SMS Triggered. Call/SMS trigger router online.</li> <li>● Manually. Connect 3G/4G network by manual.</li> </ul>
MTU	Maximum Transmission Unit is 1492 as default. It supports other value as requested.
PIN Code	Input SIM card PIN code if SIM is setup PIN by ISP.
APN	APN, provided by local ISP, usually CDMA/EVDO network do not need this parameter.
User	SIM card user name is provided by ISP
Password	SIM card password is provided by ISP



NOTE

#### 【ICMP Check】

Enable ICMP, Router will automatically check whether the defined IP address is reachable per 60s. If the IP address is unreachable and ICMP check is timeout at the first time, it will check 2 times every 3 seconds. If the third time is still failed, the router will redial.

The ICMP Check IP is a public IP or company server IP address.

Step 2 After Setting, please click “save” icon.

----End

### 3.2.3 LAN Setting

Step 1 Single Click “ Basic Network>LAN” to enter below interface

The screenshot shows the 'LAN' configuration page of the router. On the left is a vertical menu with options: Status, Basic Network, WAN, Cellular, LAN (highlighted), DDNS, Routing, WLAN, Advanced Network, VPN Tunnel, Administration, Debugging, and Logout. The main content area is titled 'LAN' and contains the following settings:

- Router IP Address: 192.168.1.1
- Subnet Mask: 255.255.255.0
- DHCP Server: ☒
- IP Pool: 192.168.1.2 - 192.168.1.51 (50)
- Lease: 1440 (minutes)

At the bottom right of the main area are two buttons: 'Save' and 'Cancel'.

Figure 3-3 LAN Setting GUI

Table 3-3 LAN Setting Instruction

Parameter	Instruction
Router IP Address	Router IP address, default IP is 192.168.1.1
Subnet Mask	Router subnet mask, default mask is 255.255.255.0
DHCP	Dynamic allocation IP service, after enable, it will show the IP address range and options of lease
IP Address Range	IP address range within LAN
Lease	The valid time

Step 2 After setting, please click “save” to finish, the device will reboot.

----End

## 3.2.4 Dynamic DNS Setting

Step 1 Single click “Basic Network->DDNS to enter the DDNS setting GUI.

Figure 3-4 Dynamic DNS Setting

Table 3-4 DDNS Setting Instruction

parameter	Instruction
IP address	Default is standard DDNS protocol, for customized protocol, please contact Wlink engineer. Usually, use default IP 0.0.0.0
Auto refresh time	Set the interval of the DDNS client obtains new IP, suggest 240s or above
Service provider	Select the DDNS service provider that listed.

Step 2 Please Click “Save” to finish.

----End

## 3.2.5 Routing Setting

Step 1 Single click “Basic Network->Routing to enter the DDNS setting GUI.

Status

Basic Network

WAN

Cellular

LAN

DDNS

Routing

WLAN

Advanced Network

VPN Tunnel

Administration

Debugging

Logout

Router

### Current Routing Table

Destination	Gateway / Next Hop	Subnet Mask	Metric	Interface
10.64.64.64	*	255.255.255.255	0	ppp0 (WAN)
192.168.1.0	*	255.255.255.0	0	br0 (LAN)
127.0.0.0	*	255.0.0.0	0	lo
default	10.64.64.64	0.0.0.0	0	ppp0 (WAN)

### Static Routing Table

Destination	Gateway	Subnet Mask	Metric	Interface	Description
<div style="display: flex; align-items: center;"> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> </div>					
Add					

### Miscellaneous

Mode: Gateway

RIPv1 & v2: Disabled

Efficient Multicast Forwarding: ☐

DHCP Routes: ☒

Spanning-Tree Protocol: ☐

Save Cancel

Figure 3-5 Routing Setting

Table 3-5 Routing Setting Instruction

Parameter	Instruction
Destination	Router can reach the destination IP address.
Gateway	Next hop IP address which the router will reach
Subnet Mask	Subnet mask for destination IP address
Metric	Metrics are used to determine whether one particular route should be chosen over another.
Interface	Interface from router to gateway.
Description	Describe this routing name.

Step 2 Please Click “ Save “ to finish.

## 3.3 WLAN Setting

It's mainly for router which support Wi-Fi, you can modify and configure WLAN parameter through Web GUI, below is the common setting

### 3.3.1 Basic Setting

Step 1 Click “WLAN->Basic Setting” to configure relative parameter

**Wireless (2.4 GHz / eth1)**

Enable Wireless ☒

MAC Address 00:90:4C:06:E1:04

Wireless Mode Access Point

Wireless Network Mode Auto

SSID router-wifi

Broadcast ☒

Channel 6 - 2.437 GHz Scan

Channel Width 40 MHz

Control Sideband Upper

Security Disabled

Save Cancel

Figure 3-6 WLAN Basic Settings GUI

Table 3-6 Basic Setting Instruction

Parameter	Instruction
Enable wireless	Enable or Disable the Wireless
Wireless mode	Support AP, AP+WDS, Bridge, Client, WDS
Wireless Network protocol	Support Auto, IEEE 11b/g/n selectable
SSID	The default is router, can be modified as per application.
Channel	The channel of wireless network, suggest keep the default
Channel Width	20MHZ and 40MHZ alternative
Security	Support various encryption method

Step 2 Please click “Save” to finish.

----End

### 3.3.2 Wireless Filter Setting

Step 1 Single click “WLAN > Wireless Filter”.

Figure 3-7 Wireless Client Filter Setting GUI

The Wireless Filter enable to set the permitted client or prohibit the specific client to connect the Wi-Fi, However, this feature is invalid for wired connection application.

Table 3-7 "Wireless Client Filter" Setting Instruction

Parameter	Instruction
Disable Filter	Choose to disable
Permit on the following client	Only allow the listed MAC address to connect to router by wireless
Block the follow Client	Prevent the listed MAC address to connect to router by wireless

Step 2 Please click "save" to finish

----End

### 3.3.3 Advanced Wireless Setting

Step 1 Please click "WLAN> Advanced Wireless" to check or modify the relevant parameter.

Status

Basic Network

**WLAN**

Basic Settings

Wireless Filter

Advanced Wireless

Wireless Survey

Advanced Network

VPN Tunnel

Administration

Debugging

Logout

Router

### Wireless Settings (2.4 GHz / eth1)

Afterburner	Disable *	▼
AP Isolation	Disable *	▼
Authentication Type	Auto *	▼
Basic Rate	Default *	▼
Beacon Interval	100	(range: 1 - 65535; default: 100)
CTS Protection Mode	Disable *	▼
Regulatory Mode	Off *	▼
Country / Region	UNITED STATES ▼	
Bluetooth Coexistence	Disable *	▼
Distance / ACK Timing	0	meters (range: 0 - 99999; 0 = use default)
DTIM Interval	1	(range: 1 - 255; default: 1)
Fragmentation Threshold	2346	(range: 256 - 2346; default: 2346)
Frame Burst	Disable *	▼
Maximum Clients	128	(range: 1 - 255; default: 128)
Multicast Rate	Auto *	▼
Preamble	Long *	▼
802.11n Preamble	Mixed Mode *	▼
Overlapping BSS Coexistence	Off *	▼
RTS Threshold	2347	(range: 0 - 2347; default: 2347)

Figure 3-8 Advanced Wireless Setting GUI

Step 2 Please click "save" to finish.

----End

### 3.3.4 Wireless Survey

Step 1 Please click "WLAN> Wireless Survey" to check survey.



Figure 3-9 Wireless Survey Setting GUI

----End

## 3.4 Advanced Network Setting

### 3.4.1 Port Forwarding

Step 1 Please click “Advanced Network > Port Forwarding” to enter the GUI, you may modify the router name, Host name and Domain name according to the application requirement.

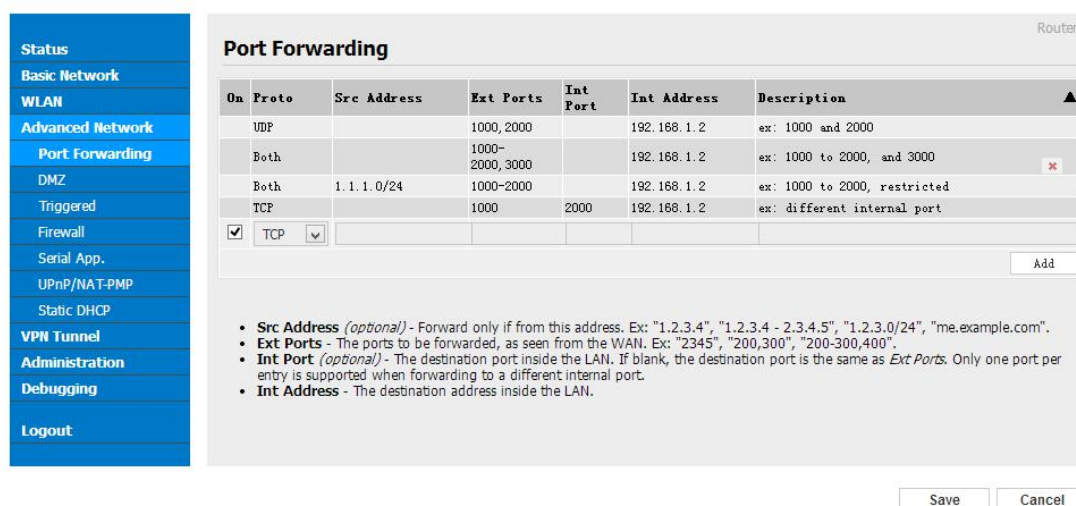




Figure 3-10 Port Forwarding GUI

Table 3-8 "Port Forwarding" Instruction

Parameter	Instruction
Protocol	Support UDP, TCP, both UDP and TCP
Src. Address	Source IP address. Forward only if from this address.
Ext. Ports	External ports. The ports to be forwarded, as seen from the WAN.
Int. Port	Internal port. The destination port inside the LAN. If blank, the destination port is the same as Ext Ports. Only one port per entry is supported when forwarding to a different internal port.
Int. Address	Internal Address. The destination address inside the LAN.
Description	Remark the rule

Step 2 Please click "save" to finish

---End

## 3.4.2 DMZ Setting

Step 1 Please click "Advanced Network> DMZ" to check or modify the relevant parameter.

Figure 3-11 DMZ GUI

Table 3-9 "DMZ" Instruction

parameter	Instruction
Destination Address	The destination address inside the LAN.

parameter	Instruction
Source Address Restriction	If no IP address inside, it will allow all IP address to access. If define IP address, it will just allow the defined IP address to access.
Leave Remote Access	

Step 2 Please click "save" to finish

----End

### 3.4.3 Triggered Setting

Step 1 Please click "Advanced Network> Triggered" to check or modify the relevant parameter.

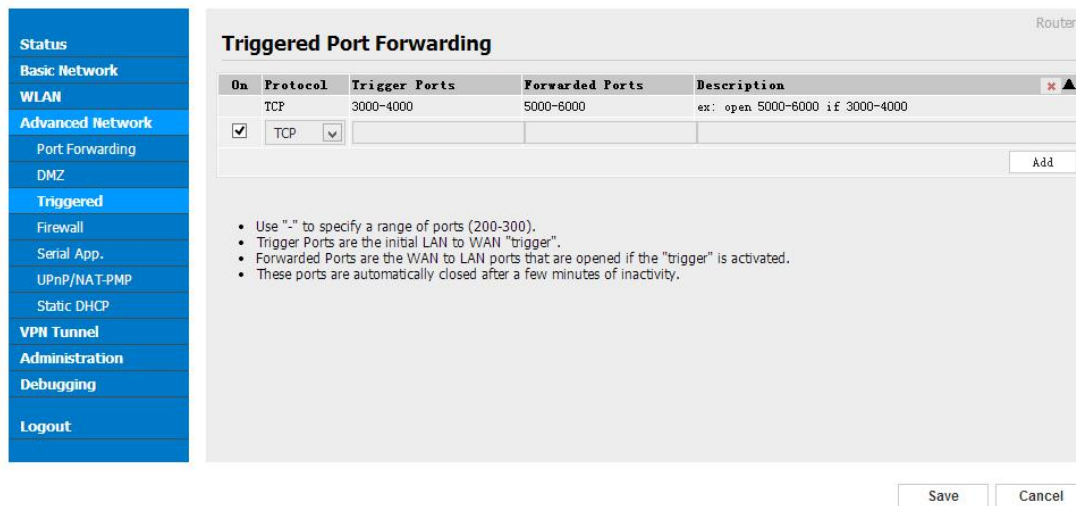


Figure 3-12 Triggered GUI

Table 3-10 "Triggered" Instruction

parameter	Instruction
Protocol	Support UDP, TCP, both UDP and TCP
Triggered Ports	Trigger Ports are the initial LAN to WAN "trigger".
Transferred Ports	Forwarded Ports are the WAN to LAN ports that are opened if the "trigger" is activated.
Note	Port triggering opens an incoming port when your computer is using a specified outgoing port for specific traffic.

Step 2 Please click "save" to finish.

----End

## 3.4.4 Firewall Setting

Step 1 Please click “Advanced Network> Firewall” to check or modify the relevant parameter.

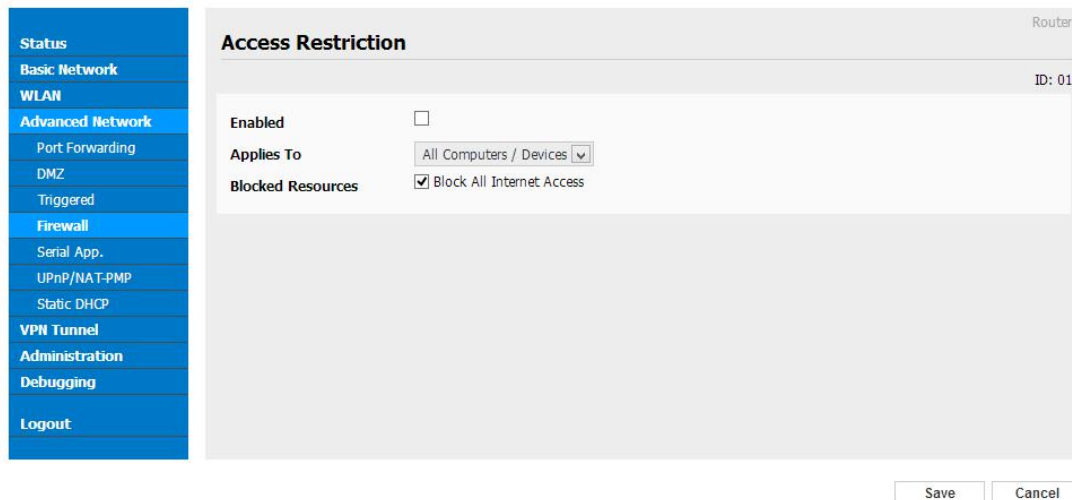


Figure 3-13 Firewall Setting GUI

Table 3-11 “Firewall” Instruction

Parameter	Instruction
Applies To	White list.
Blocked Resources	Black list.

Step 2 Please click “save” to finish.

----End

## 3.4.5 Serial App. Setting

Step 1 Please click “Advanced Network> Serial App” to check or modify the relevant parameter.

Figure 3-14 Serial App Setting GUI

Table 3-12 “Serial App” Instruction

Parameter	Instruction
Serial to TC/IP mode	Support Disable, Server and Client mode. Such as Client.
Server IP/Port	IP address and domain name are acceptable for Server IP
Socket Type	Support TCP/UDP protocol
Socket Timeout	Router will wait the setting time to transmit data to serial port.
Serial Timeout	Serial Timeout is the waiting time for transmitting the data package that is less the Packet payload. If the last package equals to the Packet payload, Serial port will transmit it immediately. The default setting is 500ms.
Packet payload	Packet payload is the maximum transmission length for serial port data packet. The default setting is 1024bytes.
Heart-beat Content	Send heart beat to the defined server to keep router online. Meantime, it's convenient to monitor router from server.
Heart beat Interval	Heart beat interval time
Baud Rate	115200 as default
Parity Bit	None as default
Data Bit	8bit as default
Stop Bit	1bit as default



Serial port(COM) connection

RJ45(WAN/COM)			DB9(male)	
1	TX+			
2	TX-			
3	RX+			
4				
5	GND	----	5	GND
6	RX-			
7	RXD(COM)	----	3	TXD
8	TXD(COM)	----	2	RXD

Step 2 Please click "save" to finish.

----End

### 3.4.6 UPnp/NAT-PMP Setting

Step 1 Please click "Advanced Network> Upnp/NAT-PMP" to check or modify the relevant parameter.

Status

Basic Network

WLAN

Advanced Network

Port Forwarding

DMZ

Triggered

Firewall

Serial App.

UPnP/NAT-PMP

Static DHCP

VPN Tunnel

Administration

Debugging

Logout

Router

Forwarded Ports

External	Internal	Internal Address	Protocol	Description
Delete All Refresh				

Settings

Enable UPnP

Enable NAT-PMP

Inactive Rules Cleaning

Secure Mode

Listen on

LAN

Show In My Network Places

Miniupnpd Custom configuration

Save Cancel

Figure 3-15 UPnP/NAT-PMP Setting GUI

Step 2 Please click "save" to finish.

## 3.4.7 Static DHCP Setting

Step 1 Please click "Advanced Network> Static DHCP" to check or modify the relevant parameter.

MAC Address	IP Address	Hostname	Desc.
00:00:00:00:00:00	192.168.1.2		
00:00:00:00:00:00			

Add

Save Cancel

Figure 3-16 Static DHCP Setting GUI

Step 2 Please click "save" to finish.

## 3.5 VPN Tunnel

### 3.5.1 GRE Setting

Step 1 Please click "VPN Tunnel> GRE" to check or modify the relevant parameter.

On	Idx	Tunnel Address	Tunnel Source	Tunnel Destination	Keepalive	Interval	Retries	Description
<input checked="" type="checkbox"/>					<input type="checkbox"/>			

Add

On	Tunnel Index	Destination Address	Description
<input checked="" type="checkbox"/>	1		

Add

Save Cancel

Figure 3-17 GRE Setting GUI

Table 3-13 “GRE” Instruction

Parameter	Instruction
Idx	GRE tunnel number
Tunnel Address	GRE Tunnel local IP address which is a virtual IP address.
Tunnel Source	Router’s 3G/WAN IP address.
Tunnel Destination	GRE Remote IP address. Usually a public IP address
Keep alive	GRE tunnel keep alive to keep GRE tunnel connection.
Interval	Keep alive interval time.
Retries	Keep alive retry times. After retry times, GRE tunnel will be re-established.
Description	

Step 2 Please click “save” to finish.

## 3.5.2 VPN Client Setting

Step 1 Please click “VPN Tunnel> VPN Client” to check or modify the relevant parameter.

Status

Basic Network

WLAN

Advanced Network

Firewall

**VPN Tunnel**

GRE

**VPN Client**

IPSec

Administration

Debugging

Logout

Router

### PPTP/L2TP Client

**Enable VPN** ☐

**VPN Mode** PPTP Client ▼

**Server Address**

**Username:**

**Password:**

**Encryption** Auto ▼

**Stateless MPPE connection** ☐

**Accept DNS configuration** Disabled ▼

**Redirect Internet traffic** ☐

**Remote subnet / netmask**  /  -> As Firewall Rule ☒

**Create NAT on tunnel** ☐

**MTU** Default ▼

**MRU** Default ▼

**Local IP Address**

**Hostname:** Router

**Custom Configuration**

Table 3-14 “VPN Client” Instruction

parameter	Instruction
VPN Mode	VPN Mode for PPTP and L2TP
Server Address	VPN Server IP address.
User name	As the configuration requested.
Password	As the configuration requested.
Encryption	As the configuration requested.
Stateless MPPE	As the configuration requested.
Accept DNS	As the configuration requested.
Remote Subnet	As the configuration requested.
Create NAT on Tunnel	As the configuration requested.
MTU	MTU is 1450bytes as default
MRU	MRU is 1450bytes as default
Local IP	Defined Local IP address for tunnel



parameter	Instruction
Address	

Step 2 Please click "save" to finish.

### 3.5.3 IPSec Setting

#### 3.5.3.1 IPSec Group Setup

Step 1 Please click "IPSec> Group Setup" to check or modify the relevant parameter.

Table 3-15 "IPSec Group Setup" Instruction

parameter	Instruction
IPSec Extensions	Support Standard IPSec, GRE over IPSec, L2TP over IPSec

parameter	Instruction
Local Security Interface	Defined the IPSec security interface
Local Subnet/Mask	IPSec local subnet and mask.
Local Firewall	Forwarding-firewalling for Local subnet
Remote IP/Domain	IPsec peer IP address/domain name.
Remote Subnet/Mask	IPSec remote subnet and mask.
Remote Firewall	Forwarding-firewalling for Remote subnet

Step 2 Please click "save" to finish.

### 3.5.3.2 IPSec Basic Setup

Step 1 Please click "IPSec >Basic Setup " to check or modify the relevant parameter.

Table 3-16 "IPSec Basic Setup" Instruction

parameter	Instruction
Keying Mode	IKE preshared key
Phase 1 DH Group	Select Group1, Group2, Group5 from list. It must be matched to remote IPSec setting.
Phase 1 Encryption	Support 3DES, AES-128, AES-192, AES-256

parameter	Instruction
Phase 1 Authentication	Support HASH MD5 and SHA
Phase 1 SA Life Time	IPSec Phase 1 SA lifetime
Phase 2 DH Group	Select Group1, Group2, Group5 from list. It must be matched to remote IPSec setting.
Phase 2 Encryption	Support 3DES, AES-128, AES-192, AES-256
Phase 2 Authentication	Support HASH MD5 and SHA
Phase 2 SA Life Time	IPSec Phase 2 SA lifetime
Preshared Key	Preshared Key

Step 2 Please click "save" to finish.

### 3.5.3.3 IPSec Advanced Setup

Step 1 Please click "IPSec >Advanced Setup " to check or modify the relevant parameter.

Table 3-17 "IPSec Advanced Setup" Instruction

parameter	Instruction
Aggressive Mode	Default for main mode
ID Payload	Enable ID Payload compress

parameter	Instruction
Compress	
DPD	To enable DPD service
ICMP	ICMP Check for IPSec tunnel
IPSec Custom Options	IPSec advanced setting such as left/right ID.

Step 2 Please click "save" to finish.

----End

## 3.6 System Management

### 3.6.1 Identification Setting

Step 1 Please click "Administrator> Identification" to enter the GUI, you may modify the router name, Host name and Domain name according to self-requirement.

Figure 3-18 Router Identification GUI

Table 3-18 "Router Identification" Instruction

Parameter	Instruction
Router name	Default is router, can be set maximum 32 character
Host name	Default is router, can be set maximum 32 character
Domain name	Default is empty, support maximum up to 32 character, it is

Parameter	Instruction
	the domain of WAN, no need to configure for most application.

Step 2 Please click "save" to finish

----End

## 3.6.2 Time Setting

Step 1 Please click “Administrator> time” to check or modify the relevant parameter.

Figure 3-19 System Configuration GUI



If the device is online but time update is fail, please try other NTP Time Server.

Step 2 Please click “save to finish.

-----End

### 3.6.3 Admin Access Setting

Step 1 Please click “Administrator>Admin” to check and modify relevant parameter.

In this page, you can configure the basic web parameter, make it more convenient for usage. Please note the “password” is the router system account password.

Figure 3-20 Admin Setting GUI

Step 2 Please click save iron to finish the setting

----End

## 3.6.4 Schedule Reboot Setting

Step 1 Please click “Administrator>Schedule Reboot” to check and modify relevant parameter.

The screenshot displays the 'Scheduler Reboot' configuration page. On the left, a vertical menu lists various system functions, with 'Scheduler Reboot' selected. The main content area, titled 'Reboot', includes an 'Enabled' checkbox, a 'Time' dropdown menu currently showing '12:00 AM', and a 'Days' section with checkboxes for each day of the week (Sun, Mon, Tue, Wed, Thu, Fri, Sat) and an 'Everyday' option. All these checkboxes are checked. At the bottom right of the page, there are 'Save' and 'Cancel' buttons.

Figure 3-21 Scheduler Reboot Setting GUI


Step 2 Please click save iron to finish the setting

----End

## 3.6.5 SNMP Setting

Step 1 Please click “Administrator>SNMP” to check and modify relevant parameter.



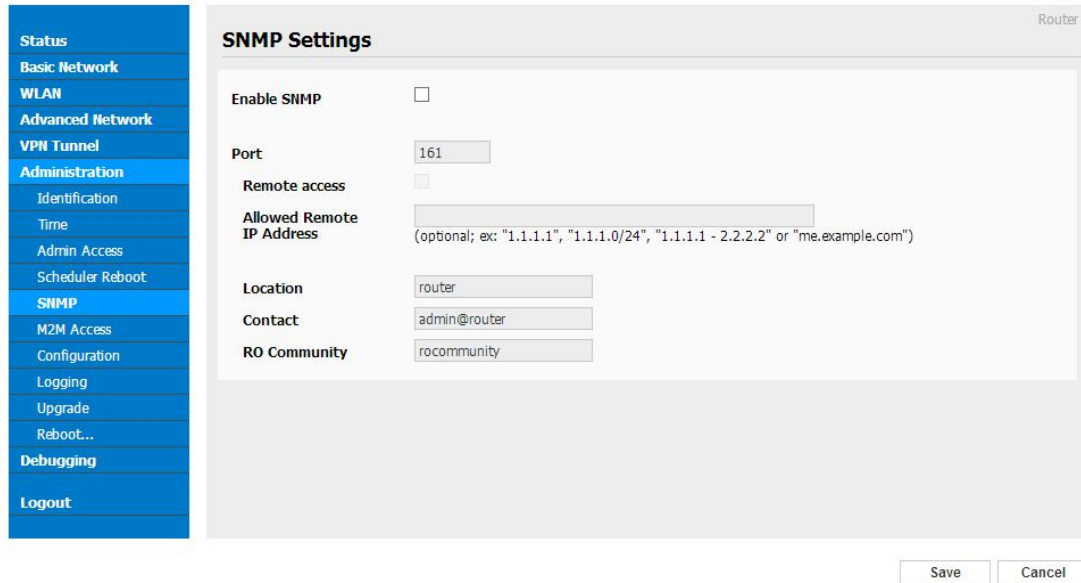

The image shows the 'SNMP Settings' configuration page in a web interface. On the left is a blue sidebar menu with options: Status, Basic Network, WLAN, Advanced Network, VPN Tunnel, Administration (highlighted), Identification, Time, Admin Access, Scheduler Reboot, SNMP, M2M Access, Configuration, Logging, Upgrade, Reboot..., Debugging, and Logout. The main content area is titled 'SNMP Settings' and includes the following fields: 'Enable SNMP' (checkbox), 'Port' (text box with '161'), 'Remote access' (checkbox), 'Allowed Remote IP Address' (text box with placeholder text: '(optional; ex: "1.1.1.1", "1.1.1.0/24", "1.1.1.1 - 2.2.2.2" or "me.example.com")'), 'Location' (text box with 'router'), 'Contact' (text box with 'admin@router'), and 'RO Community' (text box with 'rocommunity'). At the bottom right are 'Save' and 'Cancel' buttons.


Figure 3-22 SNMP Setting GUI

Step 2 Please click save icon to finish the setting

----End

### 3.6.6 M2M Access Setting (Apply to M2M management platform installation only)

Step 1 Please click “Administrator>M2M Access” to check and modify relevant parameter.

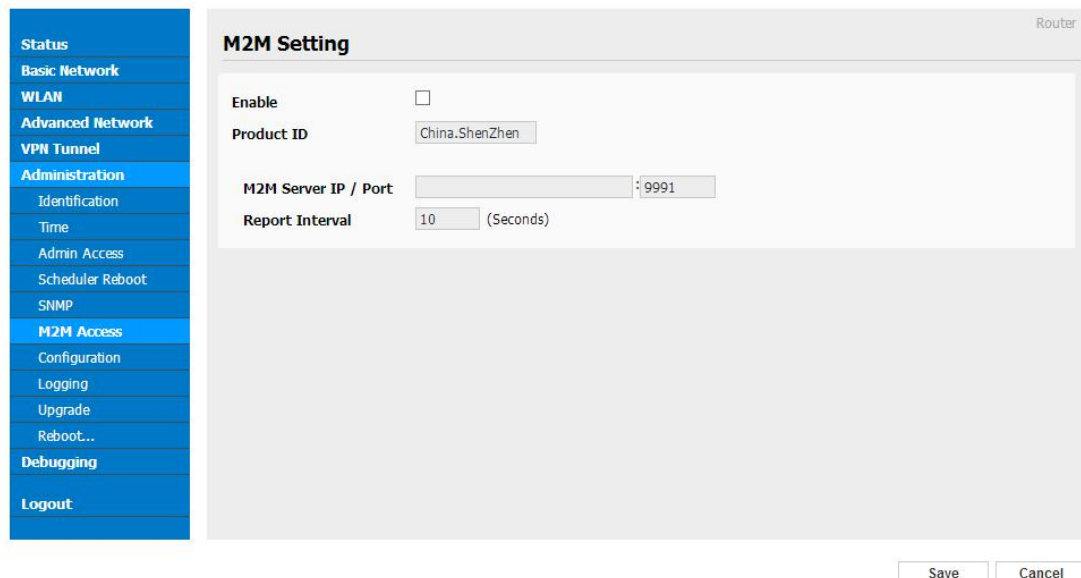

The image shows the 'M2M Setting' configuration page in a web interface. On the left is a blue sidebar menu with options: Status, Basic Network, WLAN, Advanced Network, VPN Tunnel, Administration, Identification, Time, Admin Access, Scheduler Reboot, SNMP, M2M Access (highlighted), Configuration, Logging, Upgrade, Reboot..., Debugging, and Logout. The main content area is titled 'M2M Setting' and includes the following fields: 'Enable' (checkbox), 'Product ID' (text box with 'China.ShenZhen'), 'M2M Server IP / Port' (text box with '9991'), and 'Report Interval' (text box with '10' and '(Seconds)'). At the bottom right are 'Save' and 'Cancel' buttons.

Figure 3-23 M2M Access Setting GUI

Step 2 Please click save iron to finish the setting

----End

### 3.6.7 Backup Setting

Step 1 Please click “ Administrator> Back up Configuration ” to do the backup setting

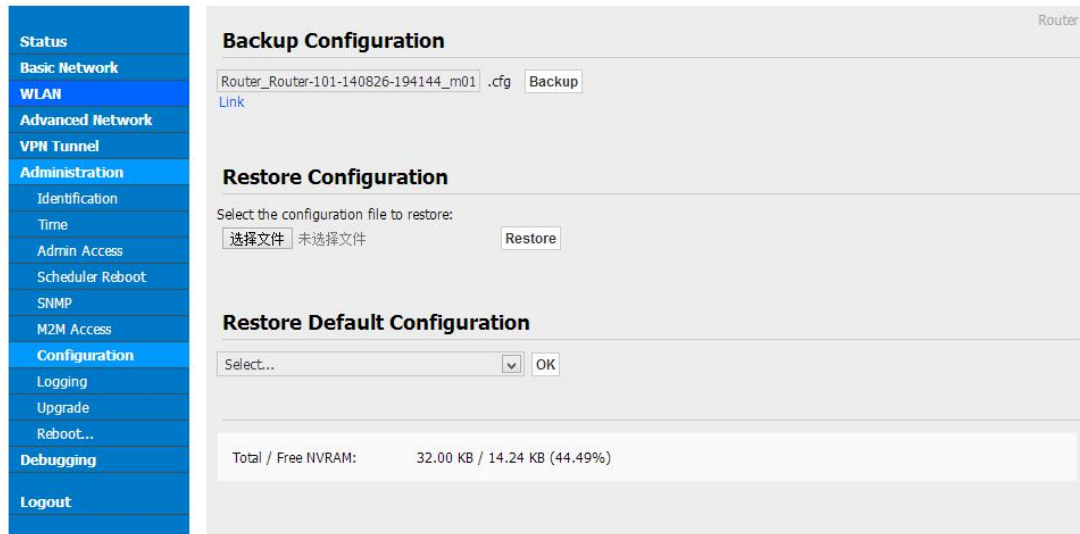


Figure 3-24 Backup and Restore Configuration GUI



Restore Default would lose all configuration information, please be careful.

Step 2 After setting the backup and restore configuration. The system will reboot automatically.

----End

## 3.6.8 System Log Setting

Step 1 Please click “Administrator> Logging” to start the configuration, you can set the file path to save the log (Local or remote sever).

The screenshot shows the 'Syslog' configuration page. On the left is a blue sidebar menu with the following items: Status, Basic Network, WLAN, Advanced Network, VPN Tunnel, Administration (highlighted), Identification, Time, Admin Access, Scheduler Reboot, SNMP, M2M Access, Configuration, Logging (highlighted), Upgrade, Reboot..., Debugging, and Logout. The main content area is titled 'Syslog' and has a 'Router' label in the top right corner. It contains the following settings:

- Log Internally:** A checkbox that is checked.
- Custom Log File Path:** A checkbox that is unchecked, followed by a text input field containing '/var/log/messages' and a note '(make sure the directory exists and is writable)'.
- Log To Remote System:** A checkbox that is checked.
- Host or IP Address / Port:** Two text input fields, the first containing '192.168.1.2' and the second containing ':514'.
- Generate Marker:** A dropdown menu set to 'Every 1 Hour'.
- Limit:** A text input field containing '60' and a note '(messages per minute / 0 for unlimited)'.

At the bottom right of the main area are two buttons: 'Save' and 'Cancel'.

Figure 3-25 System log Setting GUI

Step 2 After configure, please click “Save” to finish.

----End

## 3.6.9 Firmware upgrade

Step 1 Please click “Administrator>firmware upgrade” to open upgrade firmware tab.

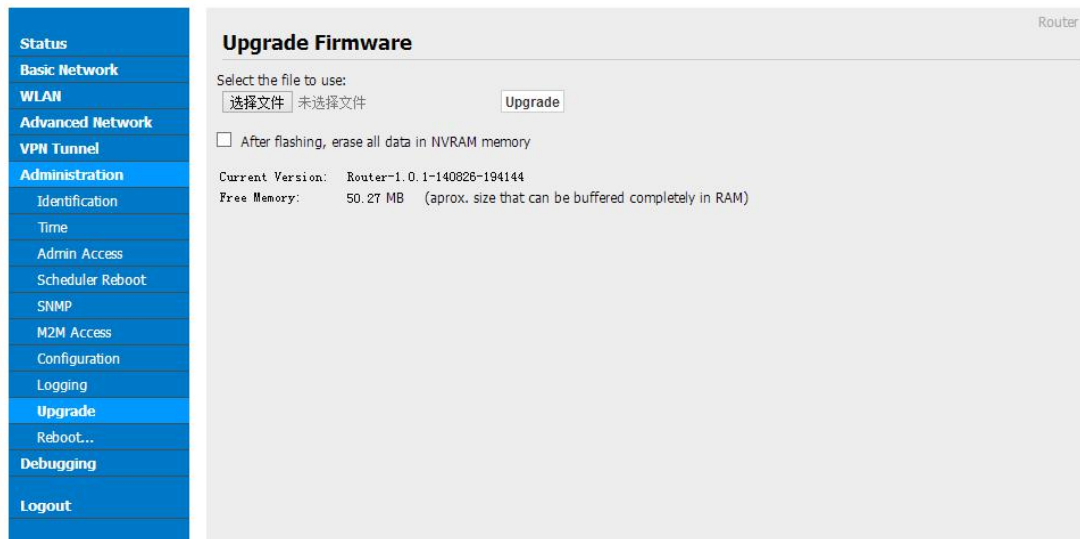


Figure 3-26 Firmware Upgrade GUI



**NOTE**

When upgrading, please don't cut off the power.

## 3.6.10 System Reboot

Step 1 Please click “Administrator>Reboot” to restart the router. System will popup dialog to remind “Yes” or “NO” before the next step.

Step 2 If choose “yes”, the system will restart, all relevant update configuration will be effective after reboot.

----End

## 3.7 Debugging Setting

### 3.7.1 Logs Setting

Step 1 Please click “Debugging>Logs” to check and modify relevant parameter.

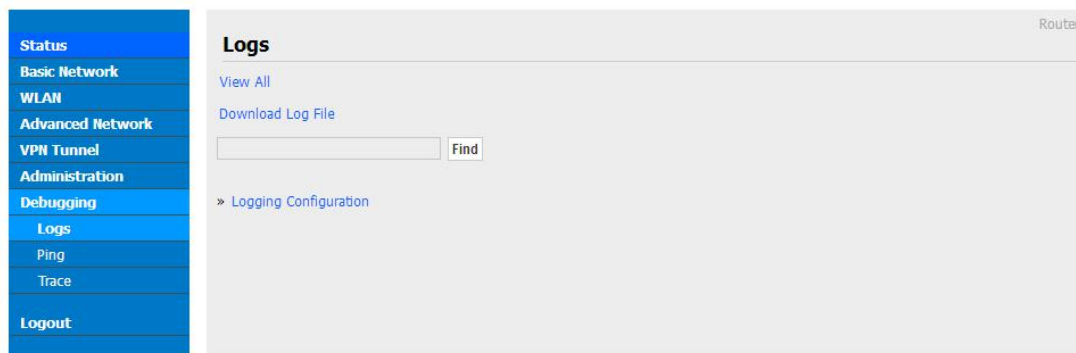


Figure 3-27 Logs GUI

Step 2 After configure, please click “Save” to finish.

----End

## 3.7.2 Ping Setting

Step 1 Please click “Debugging>Logs” to check and modify relevant parameter.

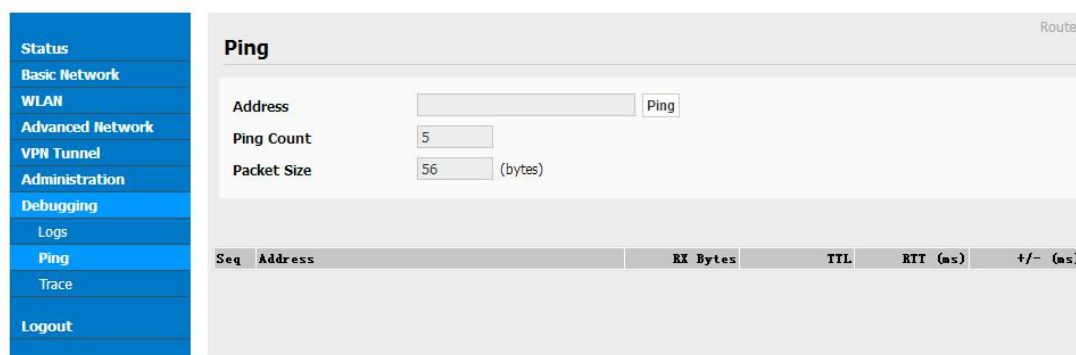


Figure 3-28 Ping GUI

Step 2 After configure, please click “Save” to finish.

----End

## 3.7.3 Trace Setting

Step 1 Please click “Debugging>Trace” to check and modify relevant parameter.

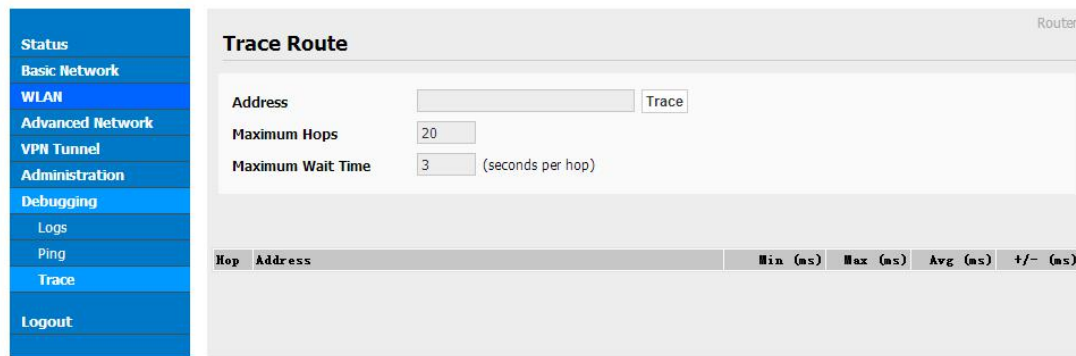


Figure 3-29 Trace GUI

Step 2 After configure, please click “Save” to finish.

**----End**

## 3.8 “RST” Button for Restore Factory Setting

If you couldn't enter web interface for other reasons, you can also use this way.

For R200 Series, “RST” button is on the left of Ethernet port, for R200 Series, the button is on the left of NET light. This button can be used when the router is in use or when the router is turned on.

Press the “RST” button and keep more than 8 seconds till the NET light stopping blink. The system will be restored to factory.

Table 3-19 System Default Instruction

Parameter	Default setting
LAN IP	192.168.1.1
LAN Subnet Mask	255.255.255.0
DHCP server	Enable
User Name	admin
Password	admin



### NOTE

After reboot, the previous configuration would be deleted and restore to factory settings.

## 3.9 Appendix (For advanced optional features only)

### 3.9.1 GPS Setting

Step 1 Please click “Advanced Network> GPS” to view or modify the relevant parameter.

The screenshot shows the 'GPS' configuration page in the router's web interface. On the left is a sidebar menu with categories: Status, Basic Network, WLAN, Advanced Network, and others. The 'GPS' option is selected. The main content area has the title 'GPS' and a 'Router' label. It contains several configuration fields: 'GPS Mode' set to 'Enabled', 'Data Format' set to 'M2M\_FMT', 'Server IP/Port' set to '192.168.1.2' with a port field set to '40002', 'Heart-Beat Content' set to 'WLINK0001', and 'Heart-Beat Interval' set to '5 (seconds)'. At the bottom right, there are 'Save' and 'Cancel' buttons.

Figure 3-30 GPS Setting GUI

Table 3-20 “GPS” Instruction

parameter	Instruction
GPS Mode	Enable/Disable
GPS Format	NMEA and M2M_FMT(WLINK)
Server IP/Port	GPS server IP and port
Heart-Beat	If choose M2M_FMT format, heart-beat ID will be packed into GPS data.
Interval	GPS data transmit as the interval time.

Step 2 Please click "save" to finish



M2M\_FMT Format as below.

1. GPS data structure.

*Router ID, gps\_date, gps\_time, gps\_use, gps\_latitude, gps\_NS, gps\_longitude, gps\_EW, gps\_speed, gps\_degrees, gps\_FS, gps\_HDOP, gps\_MSL*

2. Example

*0001\_R081850ac,150904,043215.0,06,2234.248130,N,11356.626179,E,0.0,91.5,1,1.2,97.5*

3. GPS data description



Field No.	Name	Format	Example	Description
1	Router ID	String	0001_R081850ac	0001 customizable product ID. _R router indicator. 081850ac Last 8digits of routers MAC address.
2	gps_date	yymmdd	150904	Date in year,month,day
3	gps_time	hhmmss.ss s	043215.0	UTC Time, Time of position fix.
4	gps_use	numeric	06	Satellites Used, Range 0 to 12.
5	gps_latitude	ddmm.mm mm	2234.248130	Latitude, Degrees + minutes.
6	gps_NS	character	N	N/S Indicator,N=north or S=south.
7	gps_longitude	ddmm.mm mm	11356.626179	Longitude, Degrees + minutes.
8	gps_EW	character	E	E/W indicator, E=east or W=west.
9	gps_speed	numeric	0.0	Speed over ground, units is km/h.
10	gps_degrees	numeric	91.5	Course over ground, unit is degree.
11	gps_FS	digit	1	Position Fix Status Indicator,
12	gps_HDOP	numeric	1.2	HDOP, Horizontal Dilution of Precision
13	gps_MSL	numeric	97.5	MSL Altitude, units is meter.

-- The end